


# **USER MANUAL BWT61**

# Bluetooth 2.0 Inclinometer Sensor



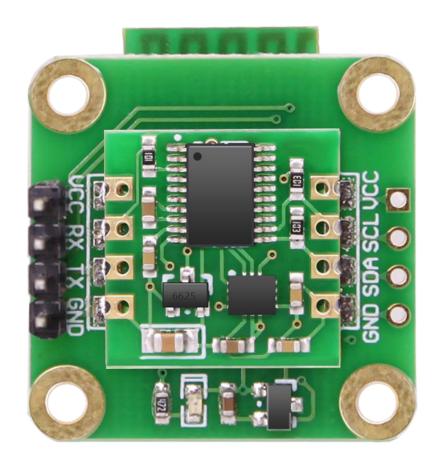

# **Tutorial Link**

#### Google Drive

**Link to instructions DEMO: WITMOTION Youtube Channel BWT61 Playlist** 

If you have technical problems or cannot find the information that you need in the provided documents, please contact our support team. Our engineering team is committed to providing the required support necessary to ensure that you are successful with the operation of our AHRS sensors.

# Contact

**Technical Support Contact Info** 

# **Application**

- AGV Truck
- Platform Stability
- Auto Safety System
- 3D Virtual Reality
- Industrial Control
- Robot
- Car Navigation
- UAV
- Truck-mounted Satellite Antenna Equipment



# **Contents**

Tutorial Link 2 -
Contact 2 -
Application 2 -
Contents - 3 -
1 Introduction
1.1 Warning Statement 6 -
1.2 LED Status - 6 -
2 Use Instructions with PC 7 -
2.1 PC Connection
2.1.1 Serial Connection 7 -
2.1.2 USB-HID Connection
2.1.3 PC's Bluetooth Connection 10 -
2.2 Software Introduction 11 -
2.2.1 Main Menu 11 -
2.2.2 Menu of Configuration 13 -
2.3 Calibration
2.3.1 Accelerometer Calibration 16 -
2.3.2 Reset Z-axis Angle 17 -
2.4 Configuration 18 -
2.4.1 Set Baud Rate 18 -
2.4.2 Data Recording 18 -
2.4.3 Data Playback 20 -
2.4.4 Standby and Wake Up 23 -
2.4.5 Placement Direction 23 -
2.4.6 Static Threshold 24 -
2.4.7 Bandwidth 25 -
BWT61   manual v0707   http://wiki.wit-motion.com/english



3 Use Instructions with Android Phone	27 -
3.1 APP Installation	27 -
3.2 Connection	29 -
3.2.1 APP Pairing	29 -
3.2.2 Phone's Bluetooth Pairing	32 -
3.3 Calibration	34 -
3.3.1 Acceleration Calibration	34 -
3.3.2 Reset Z-axis Angle	35 -
4 Multiple Connection	36 -
4.1 Download Link	36 -
4.2 Connection Instructions	36 -
5 MCU Connection	37 -
5.1 Arduino	37 -
5.2 STM32	37 -
5.3 Raspberry pi	37 -
5.4 C#	37 -
5.5 C++	38 -
5 6 Matlah	- 38 -



# 1 Introduction

The BWT61 is a multi-sensor device detecting acceleration, angular velocity and angle . The small outline makes it perfectly suitable for industrial retrofit applications such as condition monitoring and predictive maintenance. Configuring the device enables the customer to address a broad variety of use cases by interpreting the sensor data by smart algorithms.

BWT61's scientific name is AHRS IMU sensor. A sensor measures 3-axis angle, angular velocity, acceleration. Its strength lies in the algorithm which can calculate three-axis angle accurately.

BWT61 is an CE standard accelerometer. It is employed where the highest measurement accuracy is required. BWT61 offers several advantages over competing sensor:

- Heated for best data availability: new WITMOTION patented zero-bias automatic detection calibration algorithm outperforms traditional accelerometer sensor
- High precision Roll Pitch Yaw (X Y Z axis) Acceleration + Angular Velocity + Angle
- Low cost of ownership: remote diagnostics and lifetime technical support by WITMOTION service team
- Developed tutorial: providing manual, datasheet, Demo video, free software for Windows computer, APP for Android smartphones, and sample code for MCU integration including 51 serial, STM32, Arduino, Matlab, Raspberry Pi, communication protocol for project development
- WITMOTION sensors have been praised by thousands of engineers as a recommended attitude measurement solution



# 1.1 Warning Statement

- Putting more than 5 Volt across the sensor wiring of the main power supply can lead to permanent damage to the sensor.
- VCC cannot connect with GND directly, otherwise it will lead to the burning of the circuit board.
- For proper instrument grounding: use WITMOTION with its original factory-made cable or accessories.
- Do not change the baud rate because
  WITMOTION BLUETOOTH sensor's baud rate is fixed.
- For secondary developing project or integration: use WITMOTION with its compiled sample code

# 1.2 LED Status

LED	Status	Remark
Red	Flashing	working
Dlug	Flashing	pairing process
Blue	Keeping still	successful pairing



#### **Use Instructions with PC** 2

#### **PC Connection** 2.1

PC software is only compatible with Windows system.

#### **BWT61 Playlist**

### 2.1.1 Serial Connection

**Step 1.** Connect the sensor with a serial converter PIN Connection:


VCC -5V

TX -RX

RX -TX

GND - GND

(When connecting with computer, VCC-5V is recommended.)

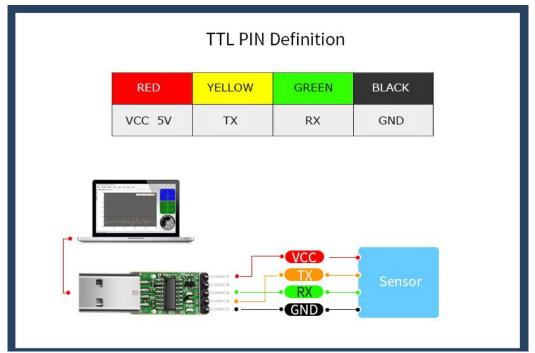



#### **Recommended tools:**




**Step 2.** Unzip the software and install the driver CH340 or CP2102 (Depending on which accessory for usage.)

Link to tutorial of 3-in-1 serial converter/ TTL serial cable (CH340 driver)

Link to tutorial of 6-in-1 serial converter (CP2102 driver)

**Step 3.** Plugin the converter to computer and confirm the "com port" in device manager

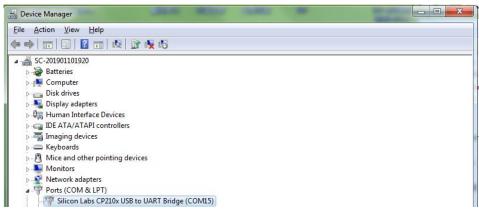

**Step 4.** Open the software(Minimu.exe)
Data will appear after auto-search finishes

**Notice:** If not successful, please operate manually Choose the com port and baud rate 115200, data will be shown on the software.



### 2.1.2 USB-HID Connection




Step 1. Insert the USB-HID adapter to USB slot in the beginning

- Step 2. Power on the sensor after red light of HID adapter flashes
- Step 3. Wait till the sensor's blue LED light keeps on--pairing succeeds
- Step 4. Open the software, Minimu.exe
- Step 5. Data will appear once the auto-search finishes.




### 2.1.3 PC's Bluetooth Connection

- Step 1. Turn on computer's Bluetooth
- Step 2. Power on the sensor
- Step 3. Search HC-06 device and input pairing password, 1234

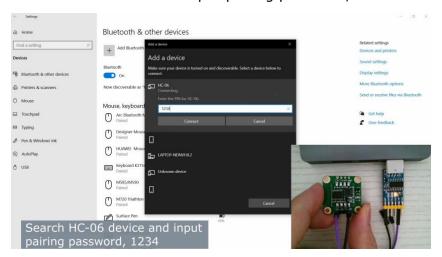

Step 4. Confirm the outgoing com port on "More Bluetooth Options" page

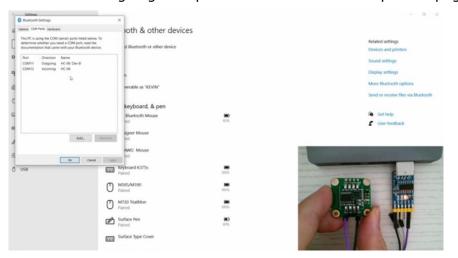

Step 5. Open software (Minimu.exe) and choose the correct com port

Step 6. Data will appear once the automatic search finishes



# 2.2 Software Introduction

## Link to download software

### 2.2.1 Main Menu




Main Menu of software		
Button		Function
File		Launch recorded HEX file (Bin format)
Tools		Hide or display tools box on left side
Record		Record function
3D		3D Unity DEMO
Config		Configuration setting
	Language	Switch to English or Chinese
Help	Bluetooth Set	Option for binding device or unbind
	Firmware update	Option for firmware update
	About Minimu	Info about Minimu.exe
	Factory test	For manufacturer internal test only
Auto-search		Auto searching the sensor
Port		Com port selection
Baud		Baud rate selection



Туре	Fixed setting as JY61 for BWT61
Open	Open com port
Close	Close com port
Acc Calibrate	Acceleration calibration




# 2.2.2 Menu of Configuration

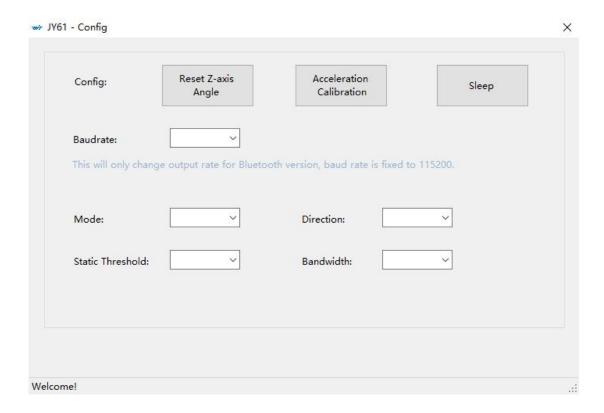

Menu of Configuration		
Button	Function	
Zero Z Angle	Reset Z-axis angle to 0 degree	
Acceleration Calibration	Ability to proceed accelerometer calibration	
Sleep	Sleep function, not available for Bluetooth	
	sensor series	
Baudrate	115200(100Hz) (Fixed)/ 9600(20Hz)	
Mode	Serial / IIC(only for modules)	
Direction	Vertical or horizontal installation	
Static threshold	Static threshold for angular velocity	
Bandwidth	Option for bandwidth range	



Menu of Data		
Button	Function	
Time	Real time	
Acceleration	Data for Acceleration	
Angular Velocity	Data for Angular Velocity	
Angle	Data for Angle	

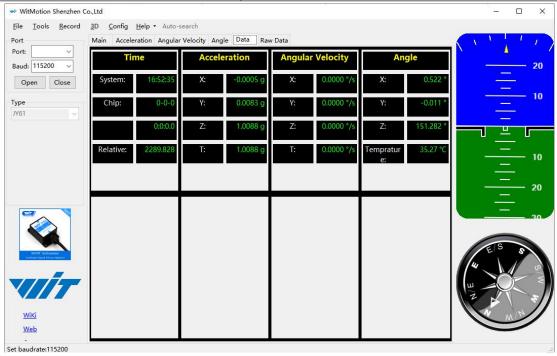



# 2.3 Calibration

Preparation:

Make sure the sensor is "Online".

Calibration on PC software:

It is required to calibrate for the first time usage.



#### 2.3.1 Accelerometer Calibration


### **Purpose:**

The accelerometer calibration is used to remove the zero bias of the accelerometer. Before calibration, there will be different degrees of bias error. After calibration, the measurement will be accurate.

#### **Methods:**

- 1. Firstly keep the module horizontally stationary, then click "Acceleration Calibration" in the "Config" of the software.
- 2. After 1  $\sim$  2 seconds, the three axial acceleration value of the module is about 0, 0,1, the X and Y axis Angle is around 0 °. After calibration, the x-y axis Angle is accurate.

Note: when putting the module horizontal, there is one G of gravitational acceleration on the Z-axis.

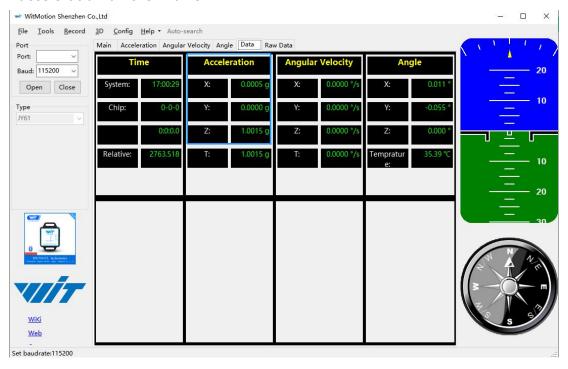



## 2.3.2 Reset Z-axis Angle

Z axis to 0 is to make the initial angle of the z axis angle is relative 0 degree. When the module is used before and z - axis drift is large, the z - axis can be calibrated, When the module is powered on, the Z axis will automatically return to 0.

Calibration methods as follow: firstly keep the module static, click the "Config" open the configuration bar and then click "Reset Z-axis Angle" option, you will see the the angle of the Z axis backs to 0 degree in the module data bar.




# 2.4 Configuration

#### 2.4.1 Set Baud Rate

Not available for Bluetooth sensor series.

# 2.4.2 Data Recording


There is no memory chip in the sensor module, and the data can be recorded and saved on the computer.

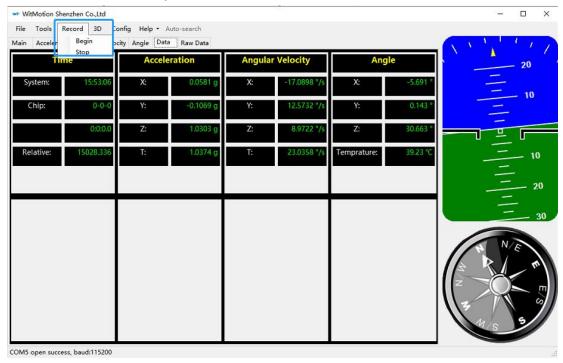


Method are as follows: Click "Record" and "Begin" will save the data as a TXT file. The saved file is in the directory of the PC software program Data.tsv. The beginning of the file has the value corresponding to the data.

For raw data analysis, please kindly refer to the register list shown on the datasheet of the corresponding model.



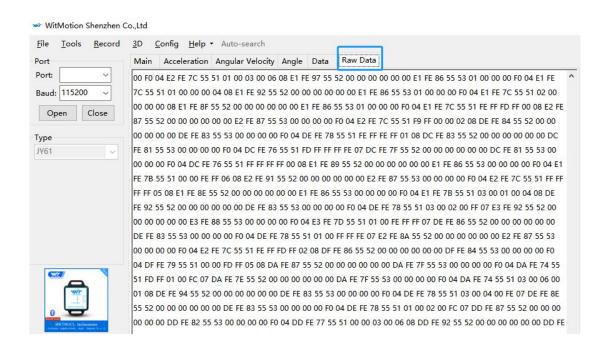

It is highly recommended that data can be pasted to a Excel file. In this way, all data will be shown in order.

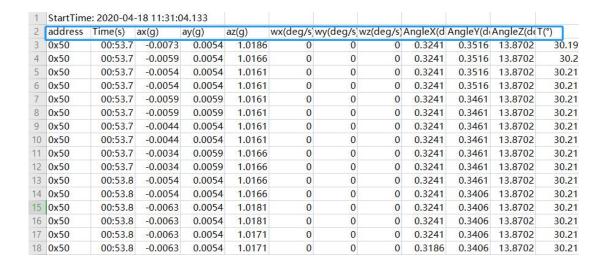




# 2.4.3 Data Playback

New function: When creating recorded file each time, there will a BIN file created in the folder of record file in path of installed software meanwhile. Recorded data playback method:

Step 1: Disconnect the sensor

Step 2: Click "File" Button and then click "Load"

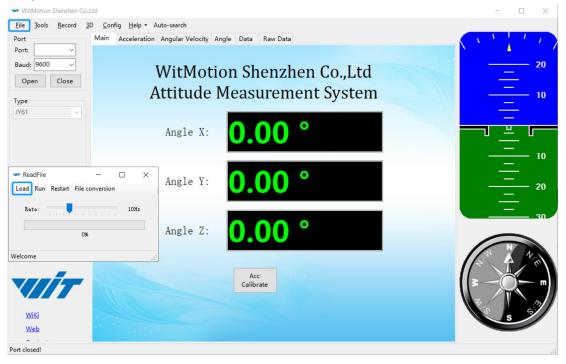



Local Disk (C:)

DATA (D:)

Play (E:)


File <u>n</u>ame: JY61\_191130141228.BIN

Step 3: Choose the original path of software installation and load the Bin file <u>F</u>ile <u>T</u>ools <u>R</u>ecord <u>3</u>D <u>C</u>onfig <u>H</u>elp → Auto-search Main Acceleration Angular Velocity Angle Data Raw Data Port: Baud: 9600 WitMotion Shenzhen Co.,Ltd Open Close Attitude Measurement System Type JY61 ₩ Please choose file ← → × ↑ 📙 « Tutorial » 6-axis Software for Windows PC » ✓ ♂ Search 6-axis Software for Wi... 夕 Date modified Туре AD EN 7/16/2019 6:09 PM File folder 20 This PC Data 6/4/2020 9:08 AM File folder 3D Objects 5/22/2019 4:53 PM File folder en Desktop 5/22/2019 4:53 PM html File folder 5/22/2019 4:53 PM Documents File folder LanguageXML 9/16/2019 11:25 PM File folder ♣ Downloads playPic 7/16/2019 11:30 AM File folder ) Music playPic\_EN 7/16/2019 6:09 PM File folder Pictures \_\_\_ recordFile File folder Videos 5/22/2019 4:53 PM Resources File folder Local Disk (C:) 5/22/2019 4:53 PM ResourcesAD File folder \_\_ DATA (D:) 6/4/2020 9:05 AM temp \_\_ Play (E:) File name: JY61\_191130141228.BIN → Binary file(\*.bin) <u>F</u>ile <u>T</u>ools <u>R</u>ecord <u>3</u>D <u>C</u>onfig <u>H</u>elp → Auto-search Main Acceleration Angular Velocity Angle Data Raw Data Port: 20 Baud: 9600 WitMotion Shenzhen Co.,Ltd Open Close Attitude Measurement System 10 Туре JY61 >>> Please choose file ← → ▼ ↑ 🔠 « 6-axis Software for Windows PC → recordFile y さ Search recordFile 10 Date modified OneDrive JY61\_190919163207.BIN 9/19/2019 4:32 PM BIN File This PC JY61\_190919164204.BIN 9/19/2019 4:42 PM BIN File 3D Objects JY61\_191130141228.BIN 11/30/2019 2:12 PM BIN File Desktop JY61 200604090859.BIN 6/4/2020 9:09 AM BIN File Documents Downloads h Music Pictures Videos

Binary file(\*.bin)



Step 4: Click "Run" and the Binary file will be playback When playback, the rate can be editable.

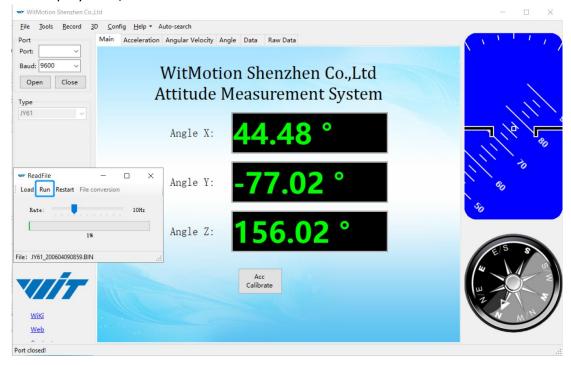



# 2.4.4 Standby and Wake Up

Not available for Bluetooth sensor series.


### 2.4.5 Placement Direction

The default installation direction of the module is horizontal. When the module needs to be installed vertically, the vertical installation can be set.

Step 1: Rotate the module 90 degrees around the X-axis

Step 2: Place the sensor 90 degrees vertically

Step 3: Click "Vertical" as install directions on "Config" menu

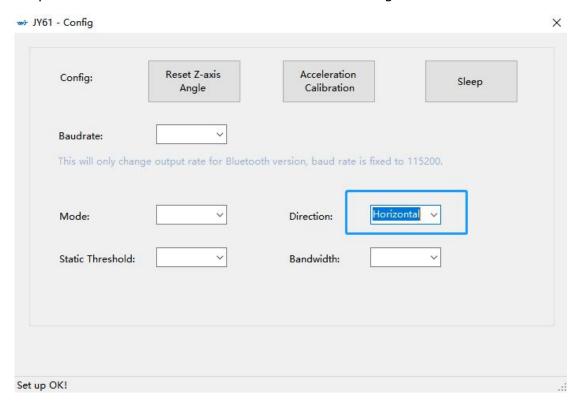




#### 2.4.6 Static Threshold

Static threshold: When the module is stationary, the angular velocity measured by the gyro chip changes slightly. The function of the static threshold is that when the angular velocity is less than the threshold, the module output angular velocity is 0.

#### Setting method:


Click the "Still Threshold" option in the configuration bar of the PC software to set the threshold. The module default is  $0.122^{\circ}/s$ .

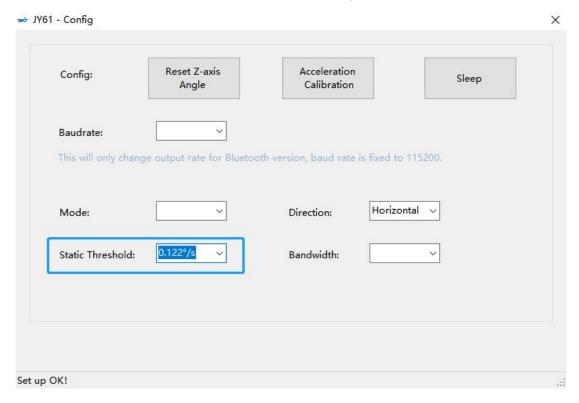



#### 2.4.7 Bandwidth

# Default bandwidth is 10Hz.

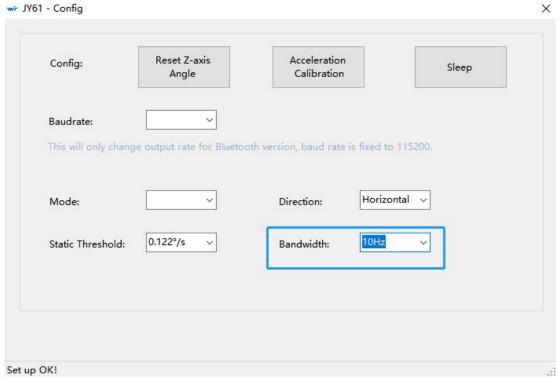


#### Function:

1. The higher rate of bandwidth setting will lead to the higher fluctuation in data waveform. Conversely, the lower rate of bandwidth, data will become more fluent.


#### For example:

Bandwidth as 20Hz, Output rate as 5Hz. The waveform is very steady.



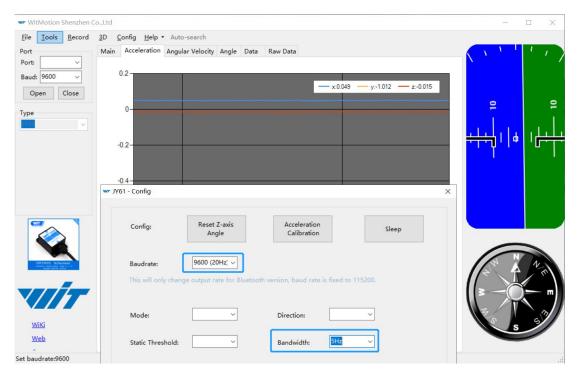

Bandwidth as 256Hz, Output rate as 20Hz. The waveform will show more fluctuation.

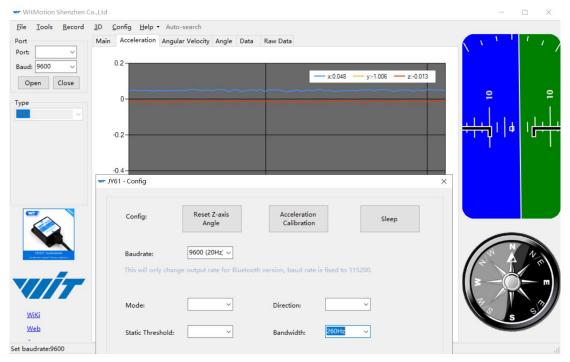

2. The higher rate of bandwidth will solve the data-repeating problem. For example, if the bandwidth setting is 20Hz, retrieval rate as 100Hz, there will be 5 repeating data. If you prefer there is no repeating data, it is required to increase the bandwidth more than 100Hz.




# 3 Use Instructions with Android Phone

For APP configuration introduction, please referring to the Chapter 2.2

# 3.1 APP Installation

Install the APK file, give permission of Location and Storage

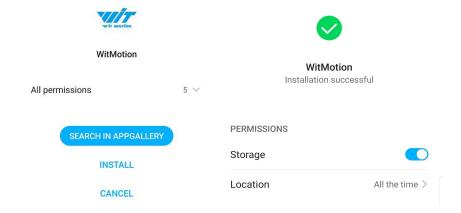

### Link to download Android APP





#### **About Android APP:**

1. It is required to allow for application positioning (Always allowed), and turn on the positioning function and Bluetooth

Note: Paired devices can be searched without turning on positioning, but according to Google's requirements, if APP installed on a higher version of Android (6.0) mobile phone is paired with a Bluetooth device, positioning must be allowed when using Bluetooth at the same time.

2. After turning on Bluetooth, it takes about one minute to search for authorization to find Bluetooth.




# 3.2 Connection

## 3.2.1 APP Pairing

Step 1. Install the APK file, give permission of Location and Storage


Step 2. Open APP and choose "6-axis Series"

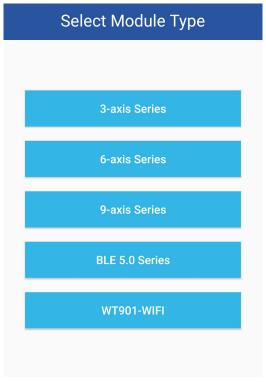

Step 3. Power on the Bluetooth sensor BWT61 and the Bluetooth of the device.



Step 4. Search the Bluetooth connection in the phone, the name of which was "HC -06", password is 1234.

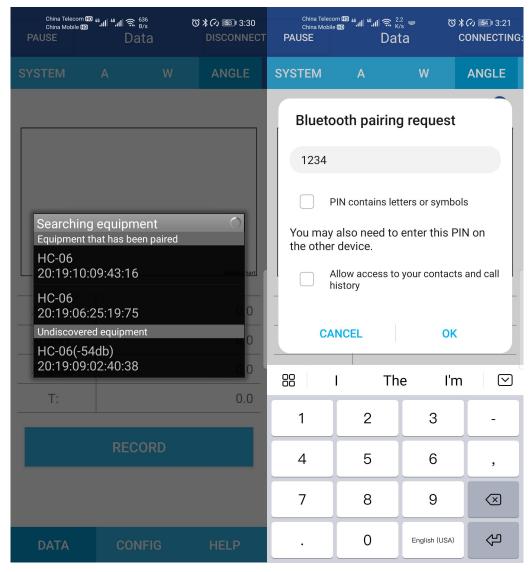



Step 5. When pairing is done, the blue LED light of sensor will remain still. After a few seconds, the data will show automatically.







# 3.2.2 Phone's Bluetooth Pairing

- Step 1. Install the APK file, give permission of Location and Storage
- Step 2. Turn on the Bluetooth in the setting menu of smartphone
- Step 3. Search the Bluetooth sensor

(First pairing the device will be recognize as mac address and will be shown as HC-06 after successful pairing.)

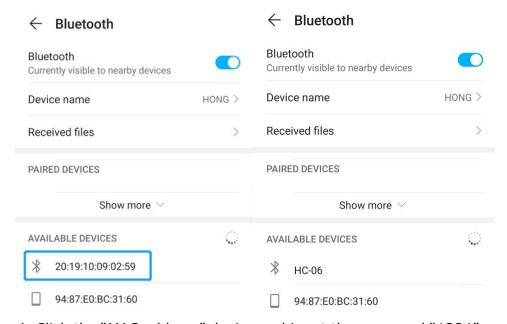

Step 4. Click the "MAC address" device and input the password "1234"

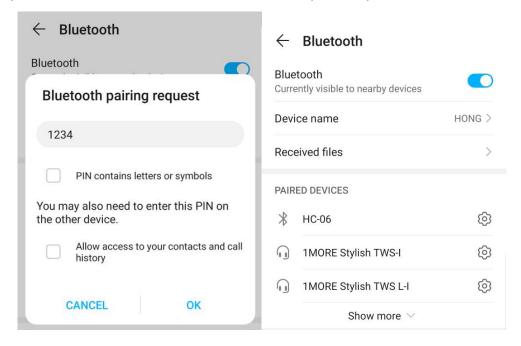



# Step 5. Open the WITMOTION APP, and choose "6-axis Series"

Step 6. Click "Scan" and select the paired Bluetooth device "HC-06" (No need to input password)

Step 7. The Blue LED light of sensor will remain still. Connection with APP is successful.






## 3.3 Calibration

Link to calibration demo:

#### 3.3.1 Acceleration Calibration


- Step 1. Keep the module horizontally stationary
- Step 2. Click the "Calibration" menu
- Step 3. Click the "Acceleration Calibration" and wait for 3 seconds
- Step 4. Judge the result--confirm if there is 1g on Z-axis acceleration

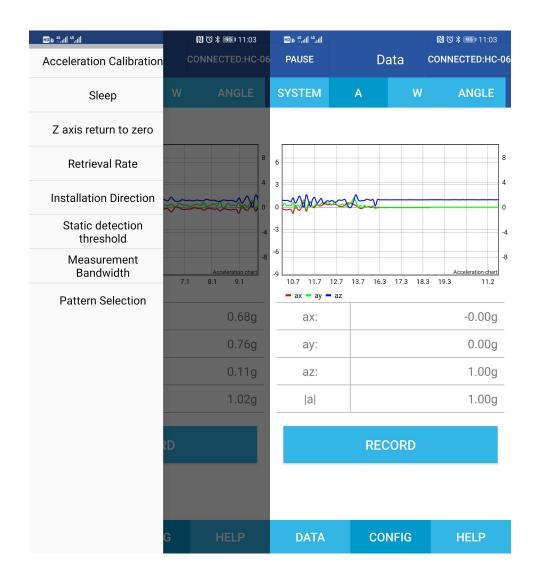



#### 3.3.2 **Reset Z-axis Angle**

- Step 1. Keep the module horizontally stationary
- Step 2. Click the "Calibration" menu
- Step 3. Click the "Z axis return to zero" and wait for 3 seconds
- Step 4. Check the data of "Angle Z" to see if it is  $0^{\circ}$ .

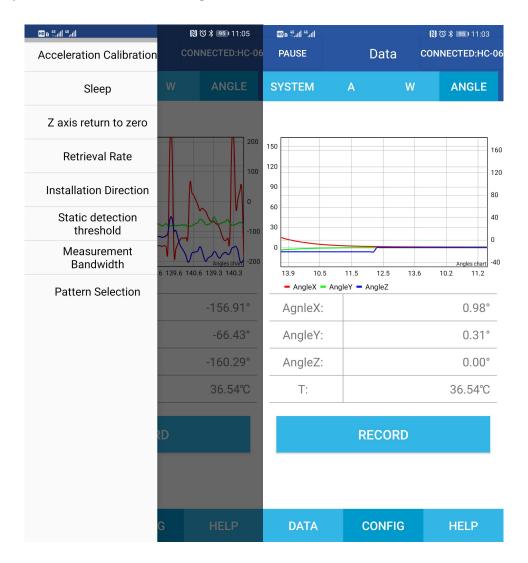



# 4 Multiple Connection

For software introduction, please referring to the Chapter 2.2.

## 4.1 Download Link

For multi-connection, please download the multi-connection HID software. Download link

## 4.2 Connection Instructions


- Step 1. Open the multiple-connection PC software
- Step 2. Plugin the USB-HID adapter in the beginning
- Step 3. Power on the sensor after the red light of USB-HID adapter begins flashing
- Step 4. Wait till sensor's blue LED light stops flashing--means pairing succeeds
- Step 5. For multiple-connection, repeat Step 2-4
- Step 6. Click the HID device accordingly and the data will show

#### Notice:

- 1. The multiple-connection will require the USB-HID 2.0 adapter. The USB-HID adapter is driver-free design.
- 2. Each BWT61 Bluetooth 2.0 sensor can only pair with 1 USB-HID adapter.
- 3. The multiple-connection can reach up to 8pcs.



#### **MCU Connection** 5

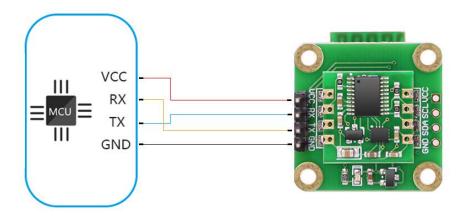

Link to download all sample code

## Link to sample code instructions demo

Notice: There is no sample code provided for Linux or Python system at present.

#### **Arduino** 5.1

**Download link** 

Arduino UNO3 Demo Link

#### 5.2 STM32

Download link

#### Raspberry pi 5.3

**Tutorial link** 

#### 5.4 C#

**DEMO link** 



5.5 C++

**DEMO link** 

5.6 Matlab

Receive Sample Code

**Dataplot DEMO**